



---

## MEscope Window

(November 29, 2023)



***Notice***

Information in this document is subject to change without notice and does not represent a commitment on the part of Vibrant Technology. Except as otherwise noted, names, companies, and data used in examples, sample outputs, or screen shots, are fictitious and are used solely to illustrate potential applications of the software.

***Warranty***

Vibrant Technology, Inc. warrants that (a) the software in this product will perform substantially in accordance with the accompanying documentation, for a period of one (1) year from the date of delivery, and that (b) any hardware accompanying the software will be free from defects in materials and workmanship for a period of one (1) year from the date of delivery. During this period, if a defect is reported to Vibrant Technology, replacement software or hardware will be provided to the customer at no cost, excluding delivery charges. Any replacement software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.

This warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customer supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

If the software does not materially operate as warranted above, the sole remedy of the customer (and the entire liability of Vibrant Technology) shall be the correction or detour of programming errors attributable to Vibrant Technology. The software should not be relied on as the sole basis to solve a problem whose incorrect solution could result in injury to a person or property. If the software is employed in such a manner, it is at the entire risk of the customer, and Vibrant Technology disclaims all liability for such misuse.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. VIBRANT TECHNOLOGY SPECIFICALLY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

THE REMEDIES PROVIDED HEREIN ARE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. VIBRANT TECHNOLOGY SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS PRODUCT, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

***Copyright***

The software described in this document is copyrighted by Vibrant Technology, Inc. or its suppliers and is protected by United States copyright laws and international treaty provisions. Unauthorized reproduction or distribution of this program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under the law.

You may make copies of the software only for backup or archival purposes. No part of this manual may be reproduced or transmitted in any form or by any means for any purpose without the express written permission of Vibrant Technology.

Copyright © 1992-2024 by Vibrant Technology, Inc. All rights reserved. Printed in the United States of America.

**Vibrant Technology, Inc.**

13275 East Fremont Place  
Suite 270  
Centennial, CO 80112 USA

phone: (831) 430-9045

fax: (831) 430-9057

E-mail: [support@vibetech.com](mailto:support@vibetech.com)

<http://www.vibetech.com>

## Table of Contents

<b>MEscope Window.....</b>	<b>6</b>
Start Page.....	6
Menu Commands.....	7
Current Project Fly-out panel .....	7
Right Click Menu .....	8
Moving the Current Project Fly-out panel.....	8
<b>Opening a Project .....</b>	<b>9</b>
Data Files.....	9
Saving Data Files.....	10
Opening a Data File Window .....	10
Adding a File to the Open Project .....	10
<b>Project Tabs.....</b>	<b>10</b>
Opening a Project From a Project Tab.....	10
Moving a Fly-out Panel .....	10
Creating a New Project Tab.....	11
Removing a Project Tab .....	11
<b>Project Menu.....</b>	<b>11</b>
Project   New Project .....	11
Project   Open Project .....	11
Project   Close Project.....	12
Project   Save Project .....	12
Project   Save Project As.....	12
Project   Save a Project Copy .....	12
Project   Open Models Library.....	12
Drawing Assistant Substructure Tab .....	12
Project   Save MEscape Graphics .....	13
Project   Open Last Project on Startup .....	13
Project   Run Script on Open .....	13
Project   MEscape Options .....	13
Display Tab .....	14
Units Tab .....	14
General Tab .....	15
Numbers Tab .....	16
Project   Exit MEscape .....	17
<b>File Menu.....</b>	<b>17</b>

File   New   Structure (STR) .....	17
File   New   Data Block ( <b>BLK</b> ) .....	17
Time Domain .....	18
Frequency Axis (DFT of Time Domain waveforms) .....	18
Triggering/Averaging .....	18
Time and Frequency Relationships .....	18
Sinusoidal Tab .....	18
Random Tab .....	18
Chirp Tab .....	19
Impact Tab .....	19
Auto spectrum Tab .....	19
File   New   Shape Table (SHP) .....	19
Manual Shape Data Entry .....	19
File   New   Acquisition (ACQ) .....	19
File   New   Report (RTF) .....	20
File   New   Script (VSL) .....	20
File   Import   Structure (STR) .....	20
<b>Importing an ASCII Text Spreadsheet File .....</b>	<b>21</b>
Creating an ASCII Text File Template .....	21
<b>UFF File Format .....</b>	<b>21</b>
Exporting a UFF File .....	22
File   Import   Data Block ( <b>BLK</b> ) .....	22
Selecting Multiple Files .....	22
Measurement Selection Dialog Box .....	22
Translate Files Dialog Box .....	23
File   Import   Shape Table (SHP) .....	24
File   Import   Report (RTF) .....	24
File   Import   Add File .....	24
<b>Documentation with Videos .....</b>	<b>25</b>
<b>Videos Menu .....</b>	<b>25</b>
Videos   Animation Frames .....	25
Record Video Commands .....	26
Videos   Record .....	26
<b>Windows Menu .....</b>	<b>26</b>
Windows   Arrange Windows   For Animation .....	26
Windows   Arrange Windows   Tile .....	26
Windows   Arrange Windows   Tile Vertically .....	27


Windows   Arrange Windows   Tile Horizontally .....	27
Windows   Arrange Windows   Cascade .....	27
Windows   Arrange Icons .....	27
Windows   Minimize All .....	27
Windows   Restore All .....	27
Windows   Open All .....	27
Windows   Close All .....	27
Windows   Open Windows .....	27
<b>Display Menu .....</b>	<b>27</b>
Display   Toolbars .....	27
Display   Status Bar .....	27
Display   Center MEscape Window .....	27
<b>Script Menu .....</b>	<b>28</b>
Script   Define Hotkeys .....	28
Define Hotkeys Commands .....	28
Script   Define Variables .....	28
Define Variables Commands .....	29
<b>Help Menu .....</b>	<b>30</b>
Help   Manuals .....	30
Help   Show Tool Tips .....	30
Help   About .....	30
License Number .....	31
License Type .....	31
License Key .....	31
SMS Expiration .....	31
Release Date .....	31
Version .....	31
Help   Start Page .....	31
Recent Projects .....	32
MEscope .....	32
Links .....	32
Help   License Manager .....	32

## MEscope Window

This chapter contains descriptions of the commands in the MEscope window.

The MEscope window is open whenever MEscope is running.


Only the commands for a **VT-620 Visual ODS** package are documented in this chapter. Additional commands authorized by MEscope Options are documented in separate chapters. Execute **Help | License Manager** to verify the Options authorized by your MEscope license.

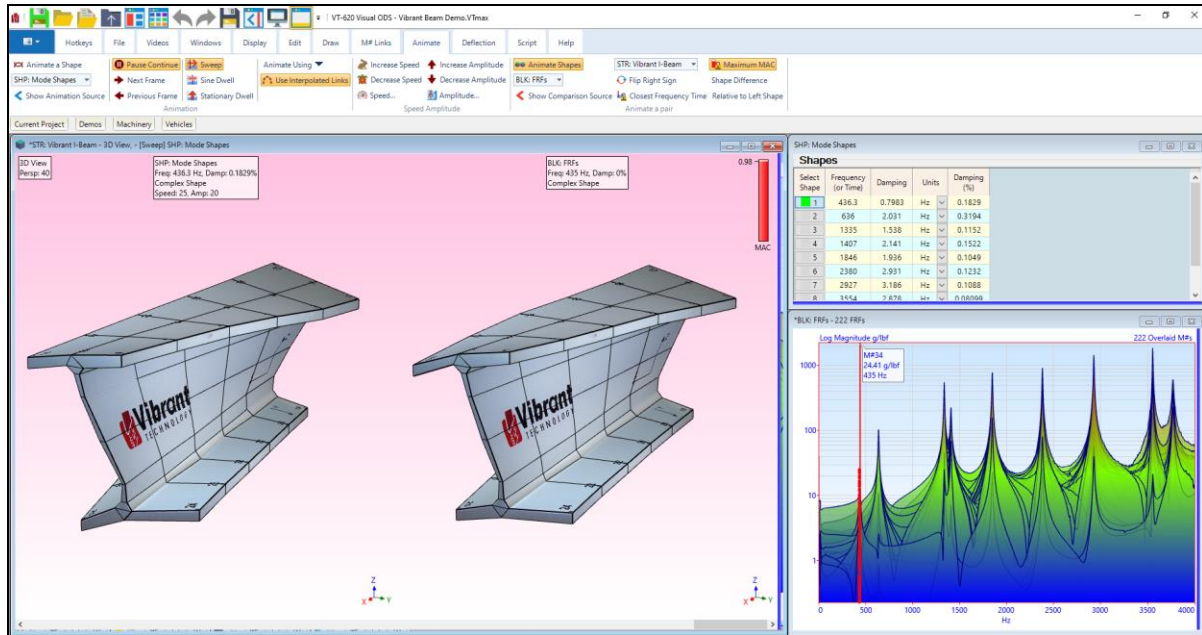

MEscope Window Showing Side-by-Side Display of a Mode Shape and ODS.

### Start Page

When MEscope is started, the **Start Page** is displayed, as shown below.

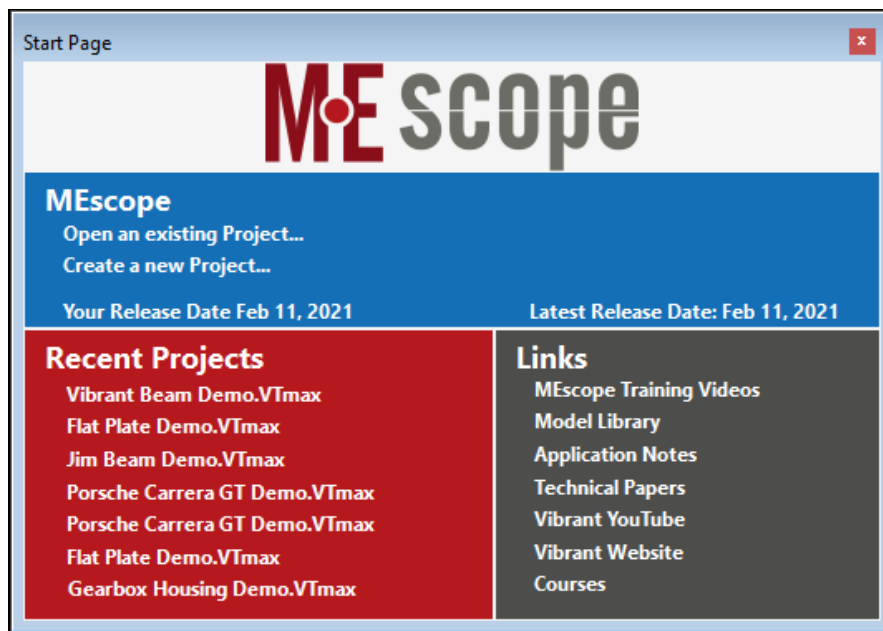

MEscope Start Page.

The **Recent Projects** section lists the **last five Project files** that were open in MEscope.

The **MEscope** section contains "**hot spots**" for opening an existing Project from disk, or for creating a new Project.

The **MEscope** section also lists **Your Release Date** and the **Latest Release Date** of software available for downloading from the Vibrant Internet website.

The **Links** section contains **links** for assessing MEscope Training Videos, the shared Model Library, Application Notes, Technical Papers, Vibrant YouTube videos, the Vibrant Web Site, and a list of available Courses.

### Menu Commands

Menu command descriptions are ordered in this manual by command menu (*from left to right*), and then by the commands in each menu (*from top to bottom*)


Each menu command is executed by choosing it from a command **menu**, by **clicking** on its **Tool** if it is on a **Toolbar** or by clicking on it in the **Ribbon** menu style

### Current Project Fly-out panel

- Click on the **Current Project tab** to open the **Current Project Fly-out panel**
- The **Current Project Fly-out panel** contains two panes, separated by a moveable **red splitter bar**.

The **Left Pane** lists the files in the **currently open Project file**

The **Right Pane** lists all other Project files on disk

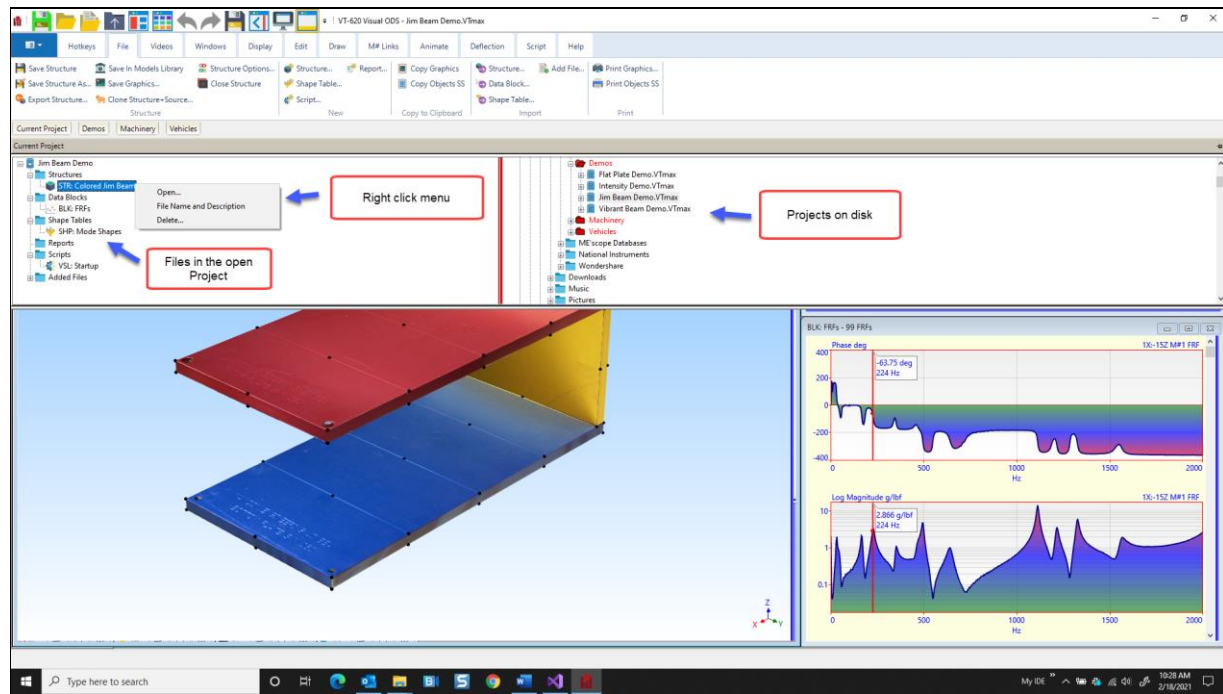

MEscope Window Showing Current Project Fly-out panel.

All work in MEscope is done in the **currently open Project**.

**Only one Project can be open at a time** in MEscope.

### Right Click Menu


**Right click** on one of the Project file names in the **Current Project Fly-out panel** to display a **right click menu**.

- Execute **Open** to open the Project (same as clicking on the Project name)
- Execute **Name & Description** to rename the Project and add a description
- Execute **Delete** to mark the Project file for deletion from the disk
- A Project file that is marked for deletion can be *un-deleted by right clicking on it*

### Moving the Current Project Fly-out panel

The **Current Project Fly-out panel** can be attached at the **top, bottom, left or right side** of the MEscope window.


- **Click on the un-pinned icon** in the *upper-right corner* of the Current Project Fly-out panel to change it to a **pinned icon**

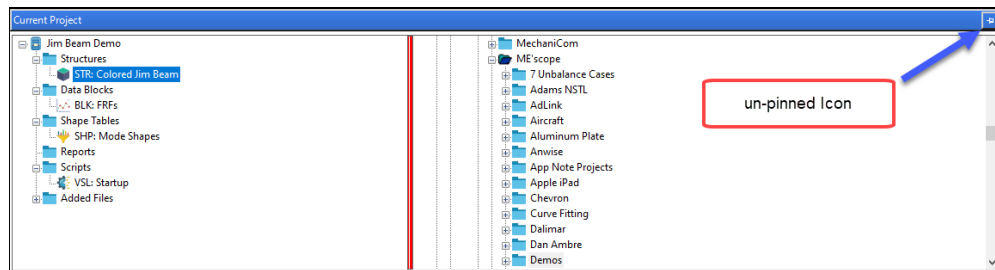

- **Click and drag** the the Current Project Fly-out panel into the center of the MEscope window **Work Area**

**Position Indicators** are displayed on the four edges of the MEscope window as shown below.

- Move the mouse over a **Position Indicator** to attach the **Current Project Fly-out panel** to that side of the window
- **Click on the pinned icon** in the *upper-right corner* of the Current Project Fly-out panel to return it an **un-pinned icon**

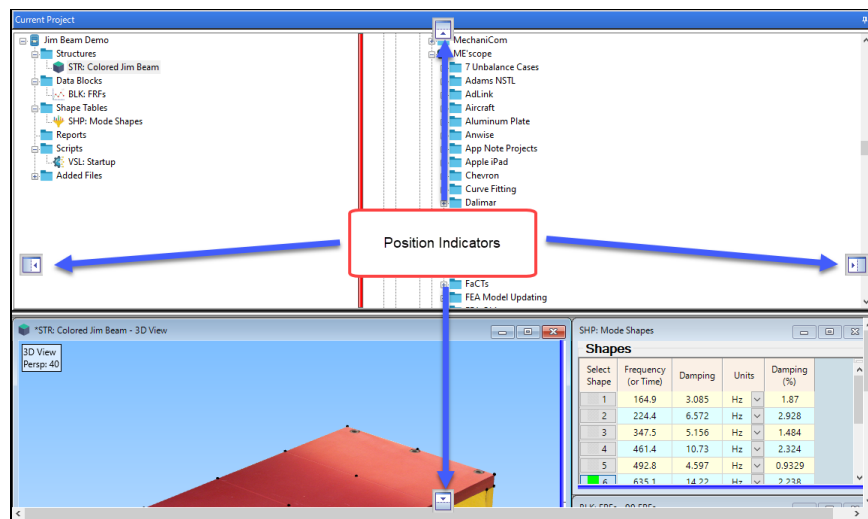



## Opening a Project

There are several ways to open a previously saved Project,

1. Execute **Project | Open** in the **MEscope** window
2. On the Current Project Fly-out panel,
  - **Double click** on the Project name in the **right pane**
  - **Right click** on the Project name in the **right pane**, and select **Open** from the **right click** menu
3. Execute **Help | Start Page** to display the Start Page
  - **Click** on a Project from the list of **Recent Projects**
  - Or **click** on **Open an existing Project**

## Data Files

A Project file can contain **one or more** of the following data files,


- Structure (**STR**) file
- Data Block (**BLK**) file
- Shape Table (**SHP**) file
- Acquisition window (**ACQ**) file
- Script (**VSL**) file
- Report (**RTF**) file
- Added Files (**MP4**, **PDF**, **JPG**, or files that run in other windows applications)

A separate window is used to display and manipulate the contents of each data file within the **currently open** Project.

When a data file is opened, a copy of its contents on disk is put into the **computer RAM memory** and displayed in its own window.

All data files in a Project are contained within the Project file on disk, **except Added Files**.

**Added Files** are stored separately on disk and are opened in a separate program associated with the file type in MS Windows.

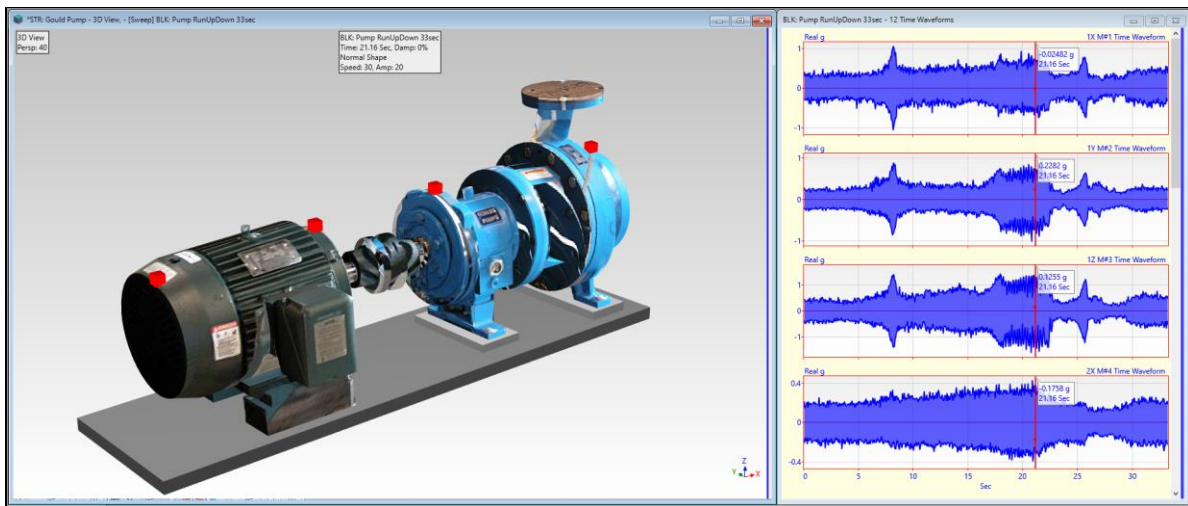

*MEscope with a Structure (STR) and Data Block (BLK) Window Open.*

### *Saving Data Files*

When a Project data file is saved, its file contents in **RAM memory** replace the contents of the file stored in its Project file on disk.

If a Project is closed without saving changes to one of its data files, the *contents of that file on disk are not changed*.

### *Opening a Data File Window*

- **Double click** on the data file in the *left pane* of the **Current Project Fly-out panel**
- Or **Right click** on data file in the *left pane* and select **Open** from the **right click menu**

### *Adding a File to the Open Project*

There are several ways to add a data file to the *currently open Project* file,

- Execute one of the **File | New** commands in the MEscope window
- Execute one of the **File | Import** commands in the MEscope window
- **Double click** on the data file in the *right pane* on the **Current Project Fly-out panel**
- Or **Right click** on the data file in the *right pane* and execute **Add** in the **right click menu**


## Project Tabs

In addition to the **Current Project** tab, *several Project* tabs are added to the MEscope window when it is installed.

- **Click** on a **Project Tab** to open its *fly-out panel* containing the MEscope Projects in that folder

### *Opening a Project From a Project Tab*

- **Hover** the mouse pointer over each Project *thumbnail* (picture) on the panel to display its name
- **Double click** on any Project in the fly-out panel to open that Project
- **Move** the mouse pointer *off the fly-out panel* to close it

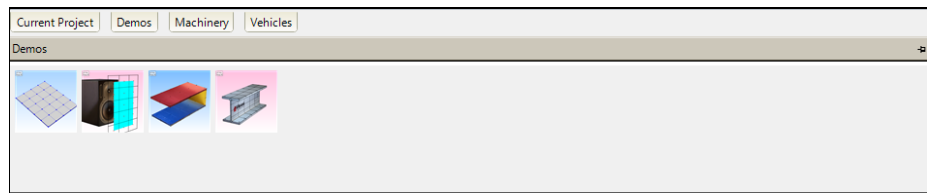


*Demos Folder Fly-out Panel.*

### *Moving a Fly-out Panel*

Any Project Fly-out panel can be moved to one of the edges of the MEscope window Work Area.

- **Click** on a **Project Tab** to open its Fly-out panel
- **Click** on the **un-pinned icon** in the *upper right corner* to **pin the Fly-out panel open**, as shown below

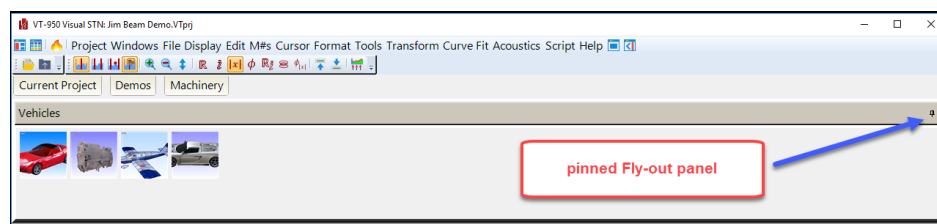

*Pinned Folder Fly-out panel.*

- **Drag** the **pinned Fly-out panel** into the *middle* of the Work Area

Notice that **four arrow icons** appear near the **top, bottom & sides** of the window.

- **Drag** the **pinned** Fly-out panel onto an **arrow icon** to attach it to the **top, bottom, or a side** of the Work Area
- **Click** on the **pin icon again** in the **upper right corner** to **un-pin** the Fly-out panel

### Creating a New Project Tab


Any **Folder** of Project files on your computer disk can be added as a Fly-out panel to the MEscope window.

- **Right click** on a Folder in the **right pane of the Current Project Fly-out panel**
- Select **Show Folder as Tab** from the right click menu

The Project Tab will be added to the Toolbar

### Removing a Project Tab

- **Click** on the tab to open its Fly-out panel
- **Right-click** on the Fly-out panel and execute **Close Tab**

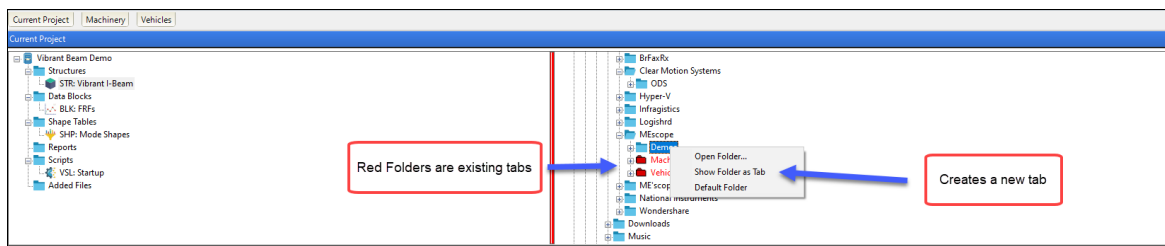

*Right Click to Create a New Project Tab.*

## Project Menu

### Project / New Project

Creates a new (empty) Project file.


Each new Project file must be named and stored to disk before it can be opened.

When the new Project is created, all data files in the **currently open Project** are removed from the computer RAM memory.

### Project / Open Project

Opens a previously saved Project file from disk

- All files in the current disk folder with the file extension (**VTprj** or **VTmax**) are listed in the Windows File dialog box
- **Double click** on the Project file name or select the file and **click** on the **Open** button

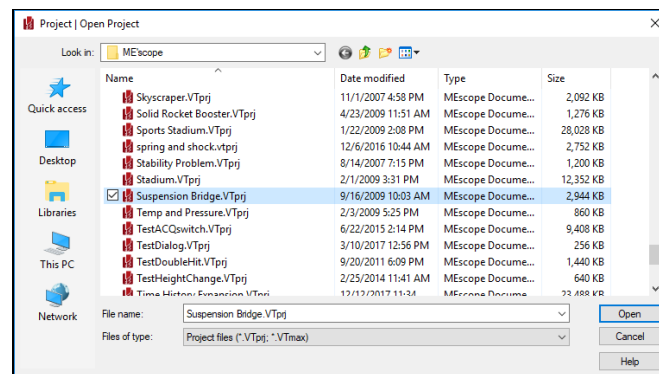

*Project File Dialog Box.*

**Project / Close Project**

Closes the **currently open Project** file and removes its data files from the computer RAM memory.

You will be prompted to save all **new or modified** data files in the **currently open Project** before they are removed from RAM memory.

**Project / Save Project**

Saves the **currently open Project** file into a file on the computer disk.


**WARNING:** Routinely save your Project to avoid having to re-create any data files should a system error occur.

**Project / Save Project As**

Saves the **currently open Project** file into a file on disk with a new name.

When this command is executed, the Windows File dialog box is opened

- Select the **desired folder** for storing the Project
- Enter the **desired name** for the Project file into the **File name** box and **click** on the **Save** button

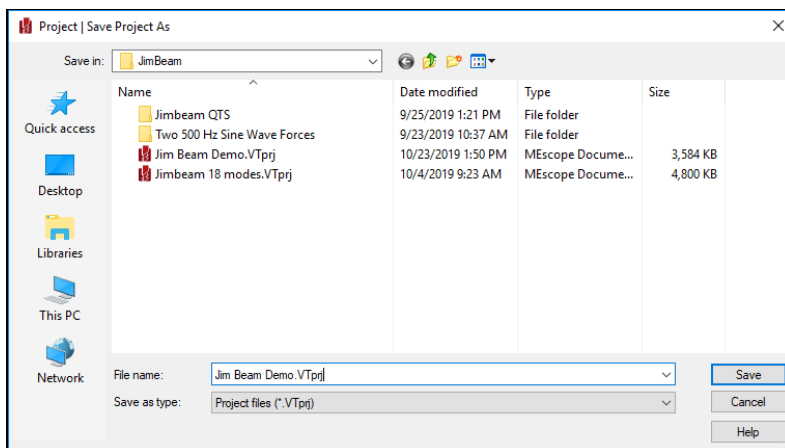

*Project Save As Dialog Box.*

**Project / Save a Project Copy**

Saves a copy of the **currently open Project** into a separate file on disk.

**Project / Open Models Library**

Opens the Local Models Library.

The Local Models Library is a Project file saved on your computer disk named **MEscope Library**

The **MEscope Library** file contains Structure (**STR**) files, and each Structure (**STR**) file contains a 3D structure model.

Any structure model can be added to the **Shared Models Library** maintained by Vibrant Technology on the Internet, or in the **Local Models Library** on your disk drive.

**File | Save in Models Library** in a Structure (**STR**) window is used to save models in either library.

**Drawing Assistant Substructure Tab**

The contents of your Local Models Library are displayed in the browser on the **Substructure** tab when the **Drawing Assistant** tabs are displayed in a Structure (**STR**) window.

***Project / Save MEscape Graphics***

Saves the graphics in the **Work Area** of the MEscape window into a disk file.

Graphics can be saved in the **JPG, GIF, PNG or BMP** file formats.


***Project / Open Last Project on Startup***

If **checked**, the Project that was last open in MEscape is opened again when MEscape is started.

***Project / Run Script on Open***

If **checked**, the commands in a **Script (VSL) window** are executed after the Project is opened from disk.

When this command is executed, the following dialog box will open,

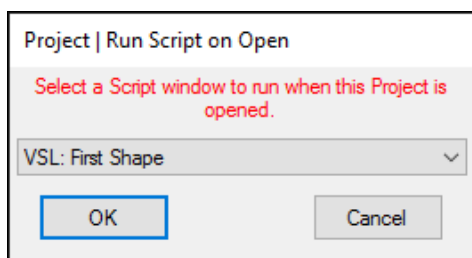


- **Choose** an existing Script in the Project and **click on OK**

If you choose “None” in the dialog box, no Script will be executed when the Project is opened

***Project / MEscape Options***

Opens the MEscape Options dialog box as shown below.

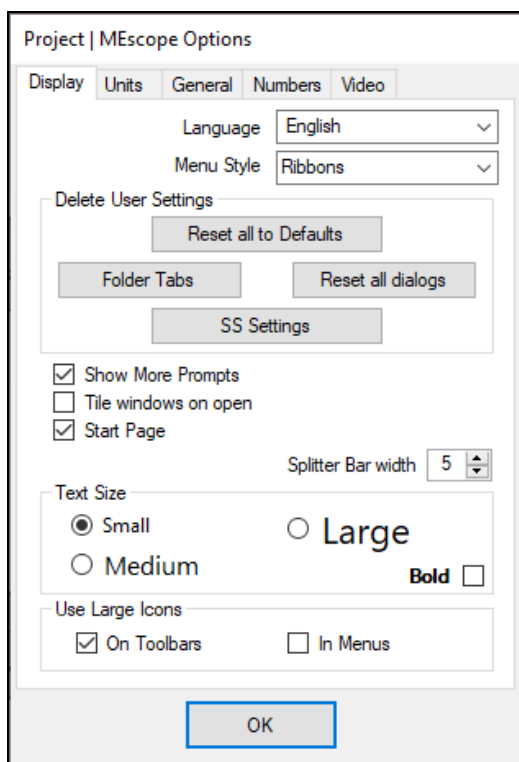

*Display Tab in the MEscape Options Box.*

The MEscape Options box *contains several Tabs* with options pertaining to the operation of MEscape

### Display Tab

#### Language

Displays all text in MEscape in the chosen local language.

#### Menu Style

Changes the style for displaying the commands in MEscape.

- **Ribbon** → displays the commands for the *active* window in a Ribbon
- **Single menu** → displays the commands for the *active* window in a single menu
- **Window** → displays a command menu & Toolbar in each window

When the menu style is changed, MEscape will shut down and restart to implement the change.

#### Delete User Settings

**Toolbars, Spreadsheets, Dialogs and Folder Tabs** can be modified to display them differently in MEscape. These buttons are used to restore them to default settings.

#### Show More Prompts

If *checked*, more prompting message boxes are displayed during the execution of some commands.

#### Tile windows on Open

If *checked*, all open windows in a Project *will be tiled* in the Work Area when the Project is opened

#### Start Page

If *checked*, the Start Page will be displayed when the Project is opened.

#### Splitter Bar width

Changes the *width of the splitter bars* between graphics and spreadsheets in all MEscape windows.

#### Text Size

Changes the *size of the text* used in all MEscape windows.

When the text size is changed, MEscape will shut down and restart to implement the change.

#### Use Large Icons

Changes the *size of command Icons* used on the Toolbars and in the menus.

### Units Tab

The units chosen on the **Units** tab are used in the Structure (**STR**) window and by some commands in the SDM & FEA options.

*Correct units are not required to create a structure model and animate shapes on it.*


Certain **SDM & FEA** commands require that *these units match the units* in a Shape Table (**SHP**) or Data Block (**BLK**) before they can be used.

## General Tab

### User Interface Sounds

If *checked*, a sound will occur when an *internal error* occurs during the use of MEscope.

- If an *internal error* occurs during the operation of MEscope, an *"Uh-Oh"* sound will come from the computer.

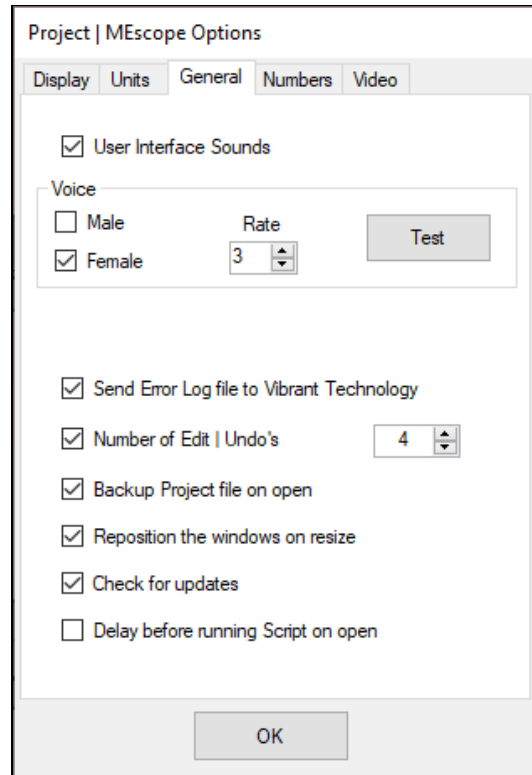

*General Tab in the MEscope Options Box.*


### Voice

Voice commands and prompts can be used in MEscope in two places,

1. With the **Script | Speech** command
2. While using the **Acquisition** window during **Impact testing**

Voice can be either **Male** or **Female** or either fast or slow by changing its **Rate**

- **Press the Test** button to listen to the Voice on your computer

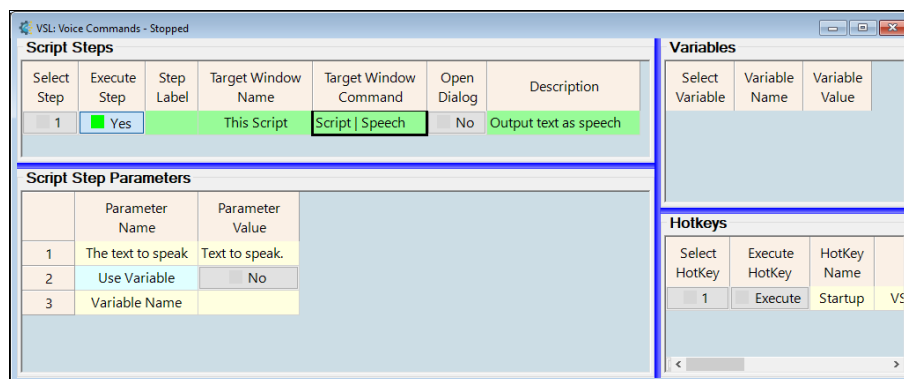

*Script | Speech Command in a Script Window*

### ***Send Error Log file to Vibrant Technology***

If ***checked***, a log file of all internal errors that occurred during the operation of MEscope will be sent to a Vibrant Technology Website when the operation of MEscope is terminated.

Software bugs that create internal errors are fixed more quickly when you ***check*** this function.

### ***Number of Edit Undo's***

If ***checked***, the number of edits specified in the adjoining box will be saved in computer memory during many operations.

- When **Edit | Undo** is executed in a window, a previous copy of the data is restored

### ***Backup Project file on Open***

If ***checked***, and a Project file ***opens successfully*** from disk storage, a **backup copy** of the Project file is stored in the same location as the Project file.

- If the Project file ***does not open successfully***, a backup file will be opened instead if available


## **Numbers Tab**

### ***Format***

The format in which numbers are displayed on graphs and in spreadsheets.

### ***Maximum Number of Digits***

The maximum ***number of decimal digits*** that will be used to display numbers.

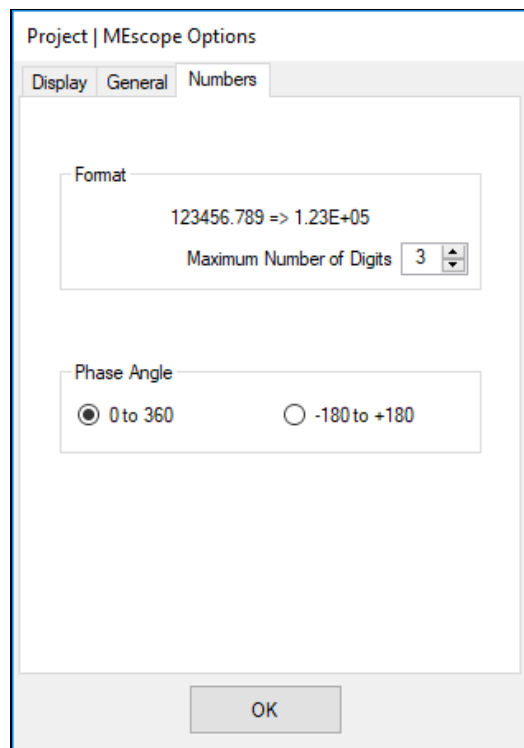

*Numbers Tab in the MEscope Options Box.*

### ***Phase Angle***

The format used to display phase angles in the **M#s spreadsheet** in a Shape Table (**SHP**) or in the **Modal Parameters spreadsheet** during curve fitting in a Data Block (**BLK**)




**Project / Exit MEsco**

Terminates the operation of MEsco.

If **any files** in a Project have **not been saved**, or have been **modified** since they were last saved, you will be prompted to save them before MEsco is terminated.

**File Menu****File / New / Structure (STR)**

Creates a new **Structure (STR)** file and opens an (**empty**) Structure window for the new **STR** file.

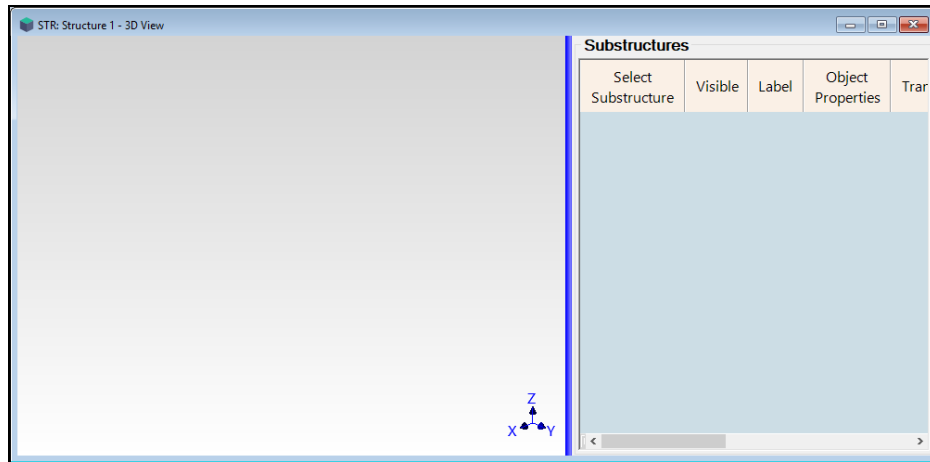

*New (Empty) Structure (STR) window.*

**File / New / Data Block (BLK)**

Creates a new Data Block (**BLK**) file and adds **TWFs** to it.

When this command is executed, a dialog box is opened as shown below

File | New | Data Block

Data Block Parameters

Time Domain		Frequency Domain	
Samples		Samples	
Block Size	2048 N		1024 N/2
Seconds		Hertz	
Resolution	0.001 delta t		0.488 delta f
Ending Value	2.05 T		500 Fmax
Sample Rate (Samples/Second)		1E+03	

Triggering/Averaging

Pre-Trigger Delay (Samples) 0

Number of Averages 1

Sinusoidal Random Chirp Impact Auto spectrum

Samples Per Waveform = 2048

Number of Frequencies 3 Number of M#s 4

	Frequency (Hz)	Damping (%)	Magnitude	Phase
1	2	1	Random	Random
2	4	1	Random	Random
3	8	1	Random	Random

OK Cancel

*New Data Block Dialog Box.*

### Time Domain

**Block Size (N samples)** → The number of time samples in each **Sampling Window**

**Resolution (delta t)** → The increment between samples on the horizontal time axis (in seconds)

**Ending Value (T)** → The ending time of the horizontal time axis in each **Sampling Window** (in seconds)

### Frequency Axis (DFT of Time Domain waveforms)

**Block Size (N/2 samples)** → The number of frequency samples (Lines) of each **Digital Fourier Spectrum (DFT)**

**Ending Value (Fmax)** → The ending frequency of the frequency axis of each **DFT** (in Hertz)

**Resolution (delta f)** → The increment between frequency Lines of each **DFT** (in Hertz)

**Sample Rate (samples/second)** → (**Sample Rate = 2 x Fmax**) (in Hertz)

### Triggering/Averaging

**Pre-Trigger Delay (samples)** → Adds zero valued samples to the beginning of each **Sampling Window**

**Number of Averages** → The number of **Sampling Windows** used for Spectrum averaging

**Samples per Waveform** → (**Averages x Block Size**)

### Time and Frequency Relationships

The following formulas *are always enforced* by the FFT algorithm.

$$\text{Fmax} = (N / 2) \times (\text{delta } f)$$

$$\text{Fmax} = 1 / (2 \times (\text{delta } t))$$

$$T = N \times (\text{delta } t)$$

$$(\text{delta } f) = 1 / T$$

### Sinusoidal Tab

If this Tab is *active*, a new Data Block is created with *sinusoidal waveforms* in it.

**Number of Frequencies** → Number of sinusoidal frequencies

**Number of M#s** → Number of waveforms to be synthesized

**Frequency (Hz)** → Sine wave frequency

**Damping (%)** → The percentage of critical damping for each **M#**

Enter **0** for no damping

Enter (0<damping<100) to synthesize Impulse Response Functions (IRFs)

**Magnitude** → The sine wave magnitude

**Phase (degrees)** → The sinusoidal phase

When (Number of **M#s** =1), you can enter a magnitude & phase

When (Number of **M#s** >1), magnitudes & phases are *randomly created* for each waveform

### Random Tab

If this is Tab *active*, a new Data Block is created with *random TWFs* in it.

**Number of M#s** → Number of **M#s** to be synthesized

**Magnitude** → All **M#s** are synthesized with this magnitude and a *random phase*

**Burst Random Width** → (%)

Used to make burst random *response signals periodic* in the **Sampling Window**

Width of the *non-zero random signal* as a percentage of the **Sampling Window**

### Chirp Tab

If this Tab is **active**, a new Data Block is created with **chirp (swept sine) waveforms** in it.

**Number of M#s** → Number of **M#s** to be synthesized.

**Starting Frequency (Hz)** → Starting frequency of the swept sine waveforms

**Ending Frequency (Hz)** → Ending frequency of the swept sine waveforms

**Magnitude** → Magnitude of all waveforms

**Burst Chirp Width** → (%)

Used to make **chirp response signals periodic** in the Sampling Window

Width of the **non-zero chirp signal** as a percentage of the Sampling Window

### Impact Tab

If this Tab is **active**, a new Data Block is created with one **impact (pulse)** waveform in it.

**Magnitude** → Magnitude of the pulse signal

**Width (samples)** → Width of the pulse (samples)

### Auto spectrum Tab

If this Tab is **active**, a new Data Block is created with an Auto spectrum in it.


**Number of Frequencies** → Number of sinusoidal frequencies

The **frequency & magnitude** of each sinusoid must be entered into the spreadsheet

### File / New / Shape Table (SHP)

Creates a new Shape Table (**SHP**) file and adds it to the **current Project**.

When this command is executed, the following dialog box will open

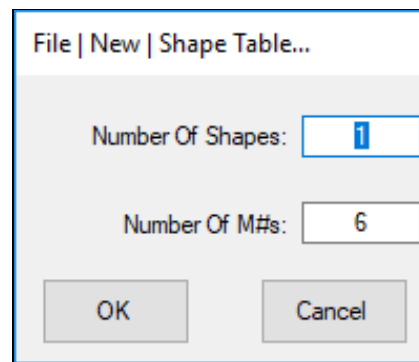

### Manual Shape Data Entry

- **Click** on a cell in the new Shape Table to **select** it, type the entry on the keyboard, and **press** the **Enter** key

### File / New / Acquisition (ACQ)

Creates a new Acquisition (**ACQ**) file and adds it to the **current Project**

This command is available if the **VES-700 or VES-780 option** is authorized by your MEscope license.

An Acquisition window is used to setup and acquire multi-channel noise & vibration data using third-party front-end hardware.

**File / New / Report (RTF)**

Creates a new (*empty*) Report (**RTF**) file and adds it to the *current Project*.

- A Report is used to document a project using both text and graphics

**File / New / Script (VSL)**


Creates a new (*empty*) Script (**VSL**) file and adds it to the *current Project*.

A Script is a spreadsheet of MEscape commands that is executed by pressing its **Hotkey** on the Menu or Ribbon bar. When a new Script (**VSL**) window is created and saved, a **Hotkey** is created from which to execute the Script. Hotkeys & Scripts are used to automate the use of MEscape by *automatically executing multiple commands* listed in spreadsheet form in a Script (**VSL**) window.

**File / Import / Structure (STR)**

Imports Structure data from a third-party disk file into a new Structure (**STR**) file and adds it to the *current Project*.

When this command is executed, the **Windows File Open** dialog box will open, as shown below

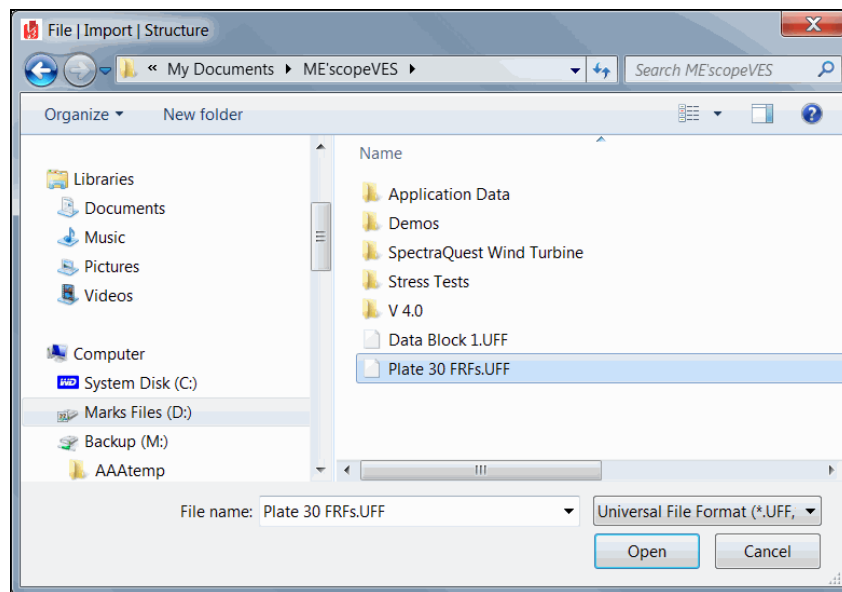

*Import Structure File Dialog Box Showing a Structure File Selected.*

- Choose the appropriate external file from the **File Name & Extension** list on the **lower right** of the dialog box

The File Name & Extension list in the Windows File dialog box contains the names and extensions of all third-party file formats that can be imported into a Structure (**STR**) file

- Select a file to import and *click* on **Open** to import it

## Importing an ASCII Text Spreadsheet File

Many third-party software packages can export data in an **ASCII text spreadsheet** format.

Structure (**STR**), Data Block (**BLK**) and Shape Tables (**SHP**) can each be imported from **ASCII text spreadsheet** files.

MEscope data files can also be exported in **ASCII text spreadsheet** format from **STR**, **BLK**, and **SHP** windows.

### Creating an ASCII Text File Template

1. Open any Project that contains a Structure (**STR**), Data Block (**BLK**), or Shape Table (**SHP**) file
2. Execute File | Export in the appropriate file window to export the file in ASCII text spreadsheet format
3. Open the file in a text processor (such as MS Word) or a spreadsheet program (such as MS Excel)
4. Paste the columns of data from the third-party spreadsheet into the MEscope text file
5. Edit the header information as required to describe the new data in the file
6. Save the ASCII text file to disk
7. Execute one of the File | Import commands to import the ASCII text file

## UFF File Format

The **Universal File Format (UFF)** is used for importing data from multi-channel data acquisition systems, and for exchanging data between different structural analysis programs.

MEscope can import & export data files in the UFF format. The most common UFF file format stores the data in an **ASCII text format**

- **TWFs** and frequency spectra can also be stored in a **binary data format**

Each line of data in a UFF file is arranged in **fixed field format**

- Fixed field format requires that all characters on each line must be in the correct columns

Each UFF data type is stored as a **data set**

- Each data set begins & ends with a "-1" line
- Each data set also has a **Data Set Number on the second line** of the data set

MEscope can import and export the following numbered data sets

UFF Data Set Number	Type of Data
15	Points
82	Lines
55	Shapes
58	Time or Frequency domain functions

In UFF terminology, Points are called **Grid Points**, Lines are called **Trace Lines**, and mode shapes are called **Functions** at Nodal DOFs.

- Imported **Grid Points** and **Trace Lines** are put into a Structure (**STR**) file
- Imported **mode shapes (Functions)** are put into a Shape Table (**SHP**) file


**Exporting a UFF File**

- Execute **File | Export** in any Structure (**STR**), Data Block (**BLK**) or Shape Table (**SHP**) window
- Choose **ASCII Universal File Format** in the **Save as type** list in the dialog box that opens and **click** on **Save**
- Open the UFF file in a text processor

**File | Import | Data Block (BLK)**

Imports time or frequency data from third-party data files into a new Data Block (**BLK**) file and adds it to the **current Project**.

- When this command is executed, the Windows Open dialog box will open, as shown below.

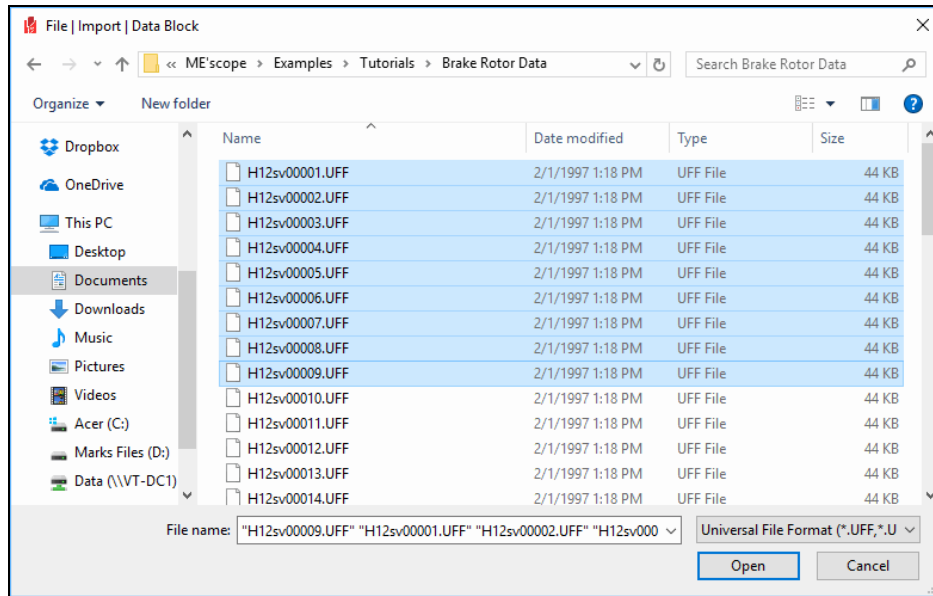

*Import Data Block Dialog Box Showing Multiple Files Selected.*

- Choose the appropriate external file from the **File Name & Extension** list on the **lower right** of the dialog box.

The **File Name & Extension** list in the Windows File dialog box contains the names and extensions of all **third-party file formats** that can be imported into a Data Block (**BLK**) file.

- Select a file to import, and **click** on **Open** to import it

**Selecting Multiple Files**

Some analyzers and data acquisition systems save only one measurement per disk file

- **Hold down** the **Shift** to **select** a **range** of files listed in the Windows Open dialog box
- **Hold down** the **Ctrl** key to **select individual** files listed in the Windows Open dialog box
- **Click** on the **Open** button to open the files

**Measurement Selection Dialog Box**

If the selected files contain different types of measurements, the Measurement Selection dialog box will open

- **Select** the **time domain** or **frequency domain** measurements tab, if both are available in the imported files

## Translate Files Dialog Box

File | Import | Data Block (BLK)

Label: Freq Resp  
 X-Axis Start: 0 Hz  
 X-Axis Step: 4 Hz  
 X-Axis End: 2E+03 Hz  
 Block Size: 501

Change X-Axis  
 Load Previous SS Values  
 Use File Name as DOFs

**M#s**

Select M#	Visible	DOFs	Units	Measurement Type	Line Color	Line Width	Label	File Name
M#1	<input checked="" type="checkbox"/> Yes	1X:-15Z	g/lbf	FRF		2		MArks BLKs
M#2	<input checked="" type="checkbox"/> Yes	1Y:-15Z	g/lbf	FRF		2		MArks BLKs
M#3	<input checked="" type="checkbox"/> Yes	1Z:-15Z	g/lbf	FRF		2		MArks BLKs
M#4	<input checked="" type="checkbox"/> Yes	2X:-15Z	g/lbf	FRF		2		MArks BLKs
M#5	<input checked="" type="checkbox"/> Yes	2Y:-15Z	g/lbf	FRF		2		MArks BLKs
M#6	<input checked="" type="checkbox"/> Yes	2Z:-15Z	g/lbf	FRF		2		MArks BLKs
M#7	<input checked="" type="checkbox"/> Yes	3X:-15Z	g/lbf	FRF		2		MArks BLKs
M#8	<input checked="" type="checkbox"/> Yes	3Y:-15Z	g/lbf	FRF		2		MArks BLKs
M#9	<input checked="" type="checkbox"/> Yes	3Z:-15Z	g/lbf	FRF		2		MArks BLKs
M#10	<input checked="" type="checkbox"/> Yes	4X:-15Z	g/lbf	FRF		2		MArks BLKs
M#11	<input checked="" type="checkbox"/> Yes	4Y:-15Z	g/lbf	FRF		2		MArks BLKs
M#12	<input checked="" type="checkbox"/> Yes	4Z:-15Z	g/lbf	FRF		2		MArks BLKs
M#13	<input checked="" type="checkbox"/> Yes	5X:-15Z	g/lbf	FRF		2		MArks BLKs

OK Cancel

*Translate Files Dialog Box.*

- **Press Select M#** buttons to select individual measurements

Each measurement listed in this dialog box is imported as a separate measurement (**M#**) and put into a **Data Block** file

### **Change X Axis Button**

Allows you to edit the time or frequency axis parameters (**Block Size, Start Value, Resolution, End Value**).

### **Load Previous Values Button**

Loads previously used spreadsheet values into the spreadsheet.

This is useful for restoring previously used DOFs, Units, etc.

### **Use File Name as DOFs Button**

Uses the imported data file name as the DOFs on each measurement.

DOFs are listed in the **DOFs** column of the spreadsheet.

Following are examples of file names that can be interpreted as M# DOFs.

Roving DOF: **1Z.Ext**

Roving & Reference DOFs: **1Z2Z.ext, 1Z\_2Z.Ext**

Reference DOF: **\_2Z.Ext**

Measurement Set: **1Z\_2Z[1].Ext, \_2Z[1].Ext**


Negative Direction: **-1Z.Ext, m1Z.Ext**

Rotational DOF: **1rX.Ext** or **1U.Ext**, **1rY.Ext** or **1V.Ext**, **1rZ.Ext** or **1W.Ext**

**File / Import / Shape Table (SHP)**

Imports Shape data from a third-party disk file into a new Shape Table (SHP) file and adds it to the current Project.

When this command is executed, the Windows File dialog box will open, as shown below

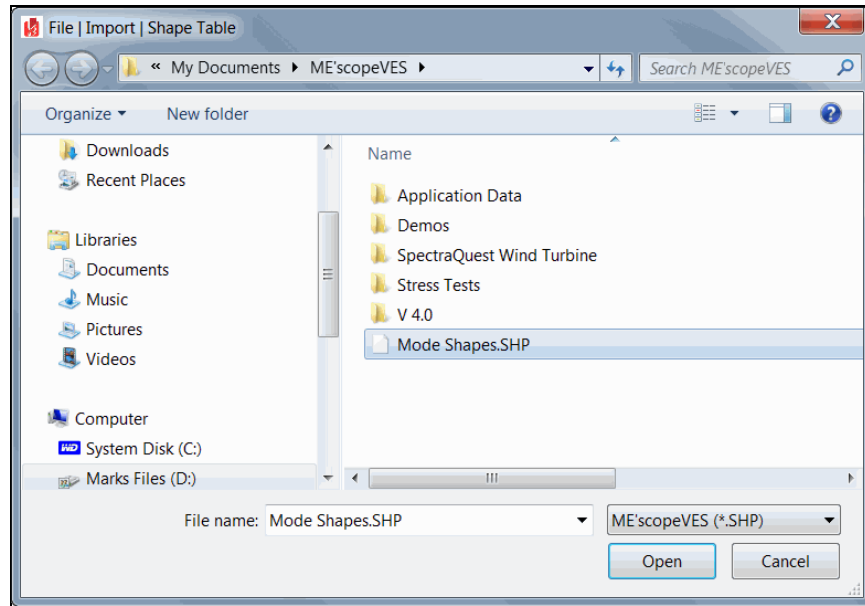

*Import Shape Table Dialog Box Showing a File Selected.*

- Choose the appropriate external file from the **File Name & Extension list** on the *lower right* of the dialog box

The **File Name & Extension list** in the Windows File dialog box contains the names and extensions of all of the *third-party file formats* that can be imported into a Shape Table (**SHP**) file.

- Select a file to import and *click* on **Open** to import it

**File / Import / Report (RTF)**

Imports a Report (**RTF**) file from a third-party disk file and adds it to the *current Project*.

**File / Import / Add File**

Adds a third-party disk file to the *current Project*.


An added File is opened in its own *associated* Windows program and must be *associated* with another Windows program to open it from within MEsco

Examples of added files are Windows media (**WMV**), MS Word (**DOC**) or MS Excel (**XLS**) files

An added File remains separate from the current Project, and is referenced by the current Project

When this command is executed, the Windows File dialog box will open



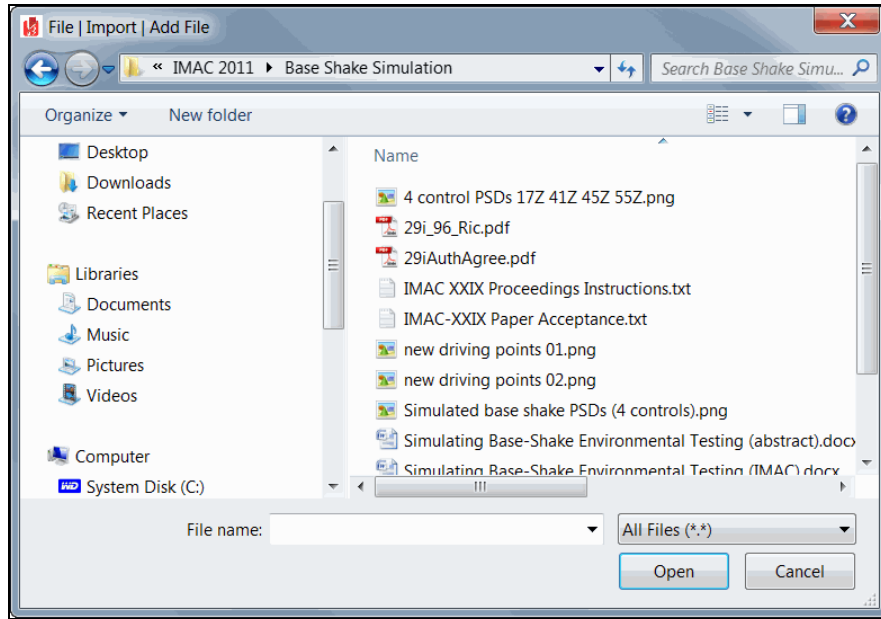

*Add File Dialog Box Showing All File Extensions Displayed.*

- Choose the appropriate external file from the **File Name & Extension list** on the *lower right* of the dialog box
- **Double click** on the file name, or select it and **click** on the **Open** button

## Documentation with Videos

MEscope allows you to interactively record a video of the contents of a Structure (**STR**) window or the MEscope window.

A video is a sequence of animation frames saved into a video **mp4** file. A Video can be played back on any computer that can play an **mp4** file

You can send videos to your clients, and they can view the animation just as it appears in MEscope. Videos can also be embedded in Microsoft **Power Point** presentations or **Word** documents and played by clicking on them. Individual frames can be cut from a video and pasted into documents, or annotations added to frames with a graphics or text processor.

## Videos Menu

The commands in the **Videos** menu are used to record two different types of videos, Animation Frames or the entire MEscope window.

Each video is saved as a **MP4** file.


### *Videos / Animation Frames*

Records the animation frames in the active Structure (**STR**) window. When this command is executed, the **Record Video** dialog box will open, as shown below.

- **Press** the **Start** button to start recording a video
- **Press** the **Stop** button to finish recording the video, and open it in your attached **Windows MP4 player**

While a video is being recorded, you can change the 3D View Rotation, Zoom, Pan, display Points, Lines, Surfaces, etc.

The **Videos** tab in the **File | Structure Options** box contains controls for video **Quality** and **Frames per Second**.

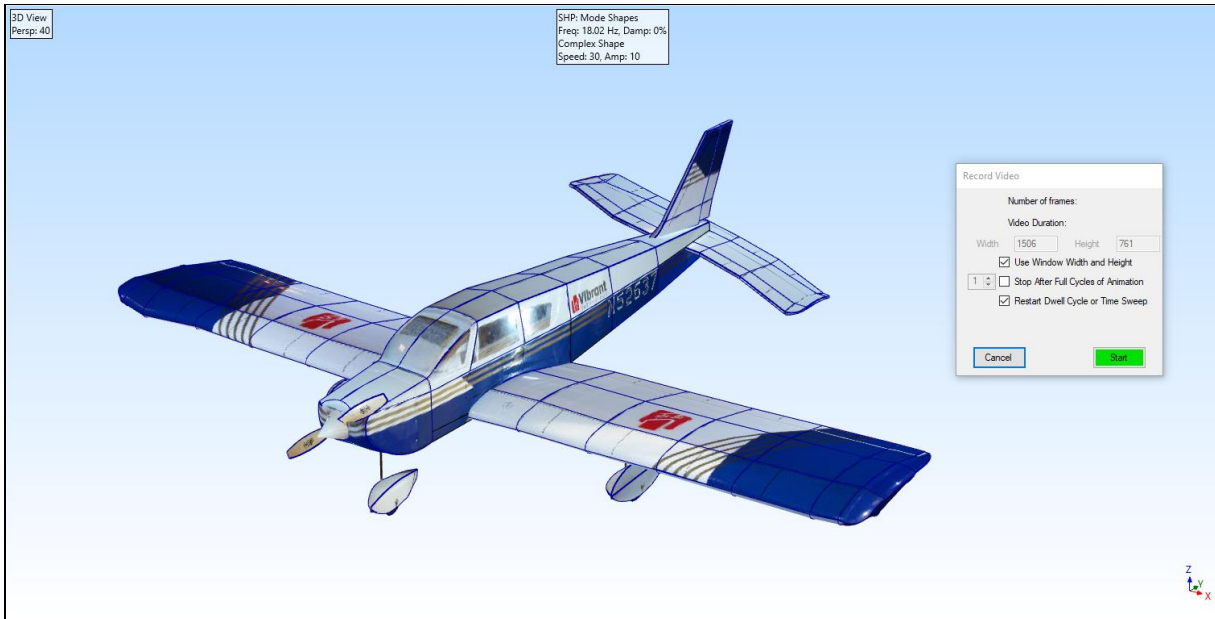

*Record Video Dialog Box.*

## Record Video Commands

### *Use Window Width and Height*

If **checked**, the video will be the size of the graphics area, either the Structure (STR) window or the **Work Area**.

- If **un-checked** the **Width** and **Height** can be entered their respective boxes

### *Stop After Full Cycles of Animation*

If **checked**, video recording will stop after (N) animation cycles are completed.

### *Restart Dwell Cycle or Time Sweep*

If **checked**, video recording will start at the beginning of an animation dwell cycle.

## Videos / Record

Records a screen capture of the MEscope window.

- **Press Record** to start a screen capture of the MEscope window
- **Press Record again** to stop recording a video

## Windows Menu

### *Windows / Arrange Windows / For Animation*

Arranges all open Structure and Animation Source windows in the Work Area.

Structure (STR) windows typically occupy the **left side** of the **Work Area**

Data Block (BLK), Shape Table (SHP) and Acquisition (ACQ) windows typically occupy the **right side** or **bottom** of the **Work Area**

The **size of the active window** is **preserved** when this command is executed

### *Windows / Arrange Windows / Tile*

Arranges all open Project windows in the **Work Area** in a tiled format.

The **upper left corner** of each window relative to all other windows is used to arrange the windows

**Windows / Arrange Windows / Tile Vertically**

Arranges all open Project windows *horizontally* in the **Work Area**.

The *upper left corner* of each window relative to the other windows is used to arrange the windows

**Windows / Arrange Windows / Tile Horizontally**

Arranges all open Project windows *vertically* in the **Work Area**.

The *upper left corner* of each window relative to the other windows is used to arrange the windows

**Windows / Arrange Windows / Cascade**

Arranges all open Project windows in a cascading format in the **Work Area**.

The *upper left corner* of each window relative to the other windows is used to arrange the windows.

**Windows / Arrange Icons**

Arranges all minimized Project window Icons on the *lower left corner* of the Work Area.

**Windows / Minimize All**

Minimizes all open Project windows in the **Work Area** into Icons on the *lower left corner* of the Work Area.

**Windows / Restore All**

Restores all open Project windows in the **Work Area** from Icons.

**Windows / Open All**

Opens all Project windows in the **Work Area**.

**Windows / Close All**

Closes all open Project windows in the **Work Area**.

**Windows / Open Windows**

All open Project windows in the **Work Area** are listed in this menu.

- If a window is *minimized*, selecting it from this list will restore it to its previously opened position
- The currently *active* window has a **darker outline**

**Display Menu****Display / Toolbars**

If *checked*, Toolbars are displayed in the MEscape window.

**Display / Status Bar**

If *checked*, the **Status Bar** is displayed at the bottom of the MEscape window.

**Display / Center MEscape Window**

Centers the MEscape window on the Windows desktop.

- **Repeated** execution of this command alternately centers the window and returns it to its former position.


## Script Menu

### *Script / Define Hotkeys*

Opens the **Define Hotkeys** window as shown below.

Each Hotkey is used to execute the commands in a Script (**VSL**) window.

Each **Hotkey Icon** in the **Define Hotkeys** window is displayed on the Menu bar or Ribbon.

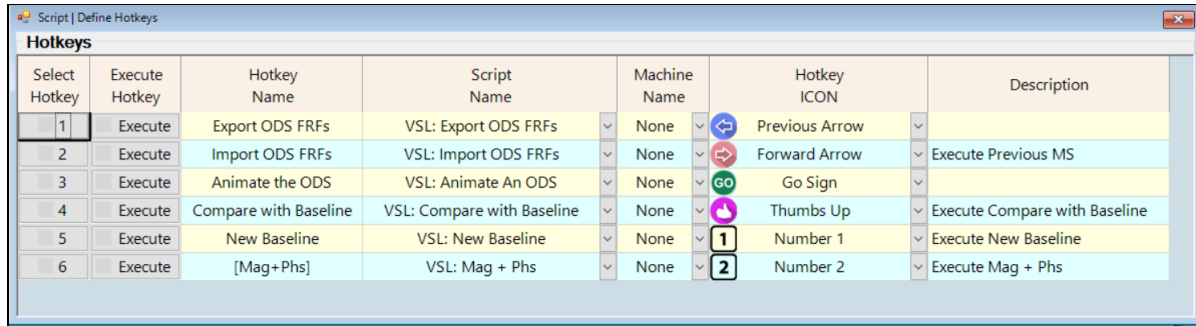

Select Hotkey	Execute Hotkey	Hotkey Name	Script Name	Machine Name	Hotkey ICON	Description
1	Execute	Export ODS FRFs	VSL: Export ODS FRFs	None	Previous Arrow	
2	Execute	Import ODS FRFs	VSL: Import ODS FRFs	None	Forward Arrow	Execute Previous MS
3	Execute	Animate the ODS	VSL: Animate An ODS	None	Go Sign	
4	Execute	Compare with Baseline	VSL: Compare with Baseline	None	Thumbs Up	Execute Compare with Baseline
5	Execute	New Baseline	VSL: New Baseline	None	Number 1	Execute New Baseline
6	Execute	[Mag+Phs]	VSL: Mag + Phs	None	Number 2	Execute Mag + Phs

*Define Hotkeys Window*

### Define Hotkeys Commands

#### *File / Save Hotkeys*

Saves the Define Hotkeys window in the *current Project*.

#### *File / Copy Hotkeys to Clipboard*

Copies the Hotkeys spreadsheet to the Clipboard.

#### *File / Print Hotkeys SS*

Prints the Hotkeys spreadsheet on the Windows printer.

#### *File / Close*

Closes the Define Hotkeys window.

#### *Edit / Add*

Adds a new Hotkey to the Hotkeys spreadsheet.

#### *Edit / Select*

These commands are used for *selecting*, *inverting selection*, and *un-selecting* Hotkeys.

#### *Edit / Move Up or Down*

These commands move Hotkeys up or down in the Hotkeys spreadsheet.

Hotkeys are displayed on the Menu or Ribbon bar *in the same order* as their order in the spreadsheet

#### *Edit / Delete*


Deletes *selected* Hotkeys from the Hotkeys spreadsheet.

### *Script / Define Variables*

Opens the **Define Variables** window as shown below.

Variables are used for storing parameters that can be used by Script commands

Certain Script commands perform **math** and **logical** operations on Variables

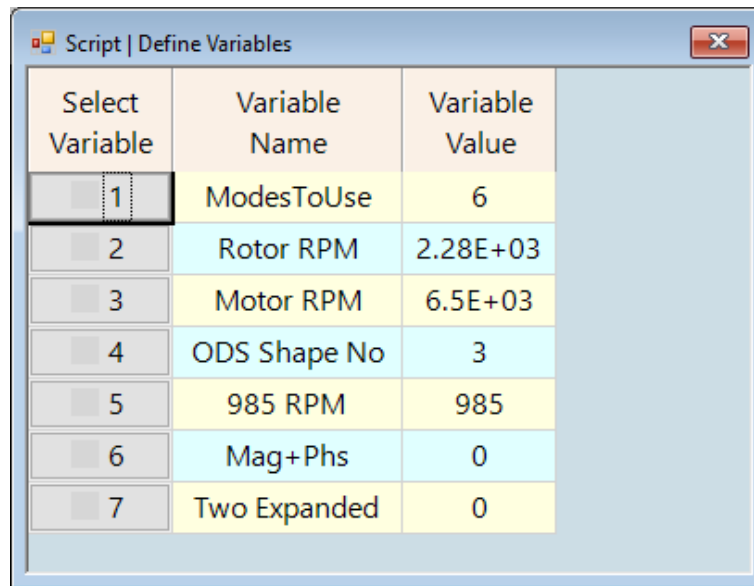

Select Variable	Variable Name	Variable Value
1	ModesToUse	6
2	Rotor RPM	2.28E+03
3	Motor RPM	6.5E+03
4	ODS Shape No	3
5	985 RPM	985
6	Mag+Phs	0
7	Two Expanded	0

*Define Variables Window***Define Variables Commands*****File / Save***

Saves the Define Variables window in the **current Project**.

***File / Copy Variables to Clipboard***

Copies the Variables spreadsheet to the **Clipboard**.

***File / Print Variables SS***

Prints the Variables spreadsheet on the Windows printer.

***File / Close***

Closes the **Define Variables** window.

***Edit / Add***

Adds a new variable to the **Defines Variables** window.

***Edit / Select***

These commands are used for *selecting*, *inverting selection*, and *un-selecting* variables.

***Edit / Move Variables Up or Down***

These commands move variables up or down in the Variables spreadsheet.

***Edit / Delete***

Deletes *selected* variables from the **Define Variables** window.

## Help Menu


### *Help / Manuals*

Opens the **MEscope Manuals** window.

This window contains links to all the MEscope Operating Manuals

### *Help / Show Tool Tips*


If **checked**, a brief description of a command is displayed when the mouse pointer is **hovered** over a button on a Toolbar or Ribbon.

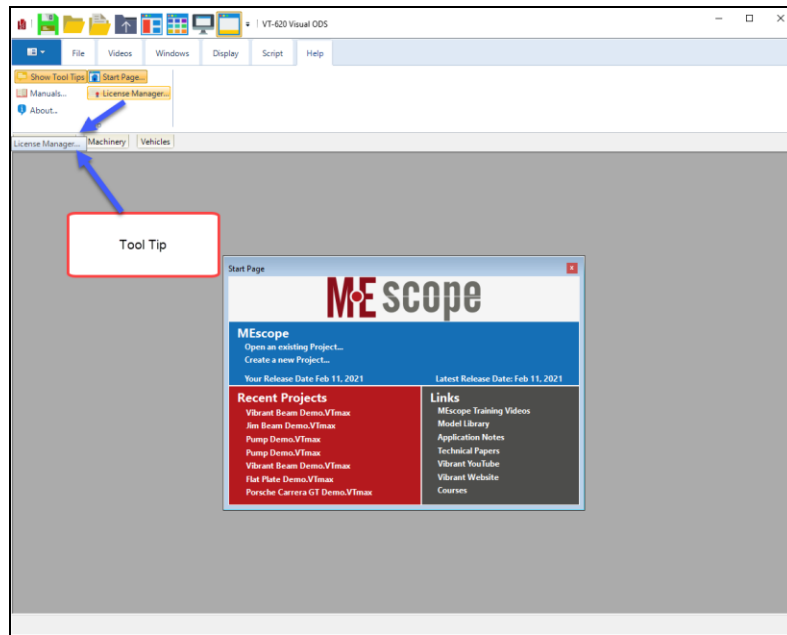

*MEscope Window Showing a Tool Tip.*

### *Help / About*

Opens the MEscope About box, as shown below.

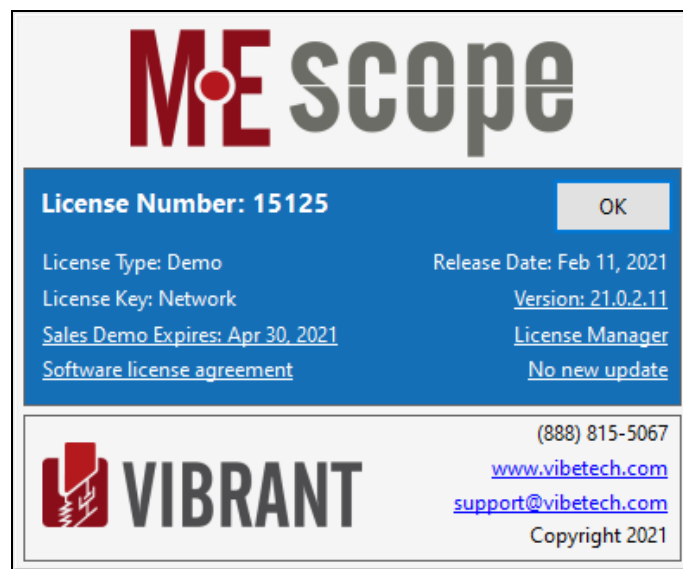

*About Box.*

### License Number

The license number of your software.

The license number of your software is *unique*

If your software uses a hardware Security Key, your license number must match the serial number on your Security Key

### License Type

The type of license for your software (Single User, Educational, Network (VLS), or Monthly Subscription).

### License Key

The name of the hardware **Security Key** required by your license.

- **Network** denotes that the **Vibrant License Server (VLS)** is required with your license

### SMS Expiration

The date *after which* you can no longer use a *newer Release Code* of software from the Vibrant Internet website.

Your current software will operate indefinitely, unless you have a **Monthly License**.

It is *strongly recommended* that your **Software Maintenance & Support (SMS)** be renewed annually to keep your software current with the latest improvements.

### Release Date

The Release Date is the date on which your software was released for customer shipments and put on the Vibrant Technology Internet website for downloading.

### Version

The Version number is a unique number assigned to the software currently installed on your computer.

### Help / Start Page

Opens the MEscope Start Page, as shown below.



*Start Page*

## Recent Projects

This section contains links to the *last five Projects* that were opened on your computer.

## MEscope

This section allows you to open an *existing Project* that has already been stored on your computer or network, or to *create a new Project*.

The **Release Date** of your software is listed, along with the **Latest Release Date** of MEscope software available for download from the Vibrant Internet site.

**Click** on **Latest Release Date** to download and install the **Latest Release Date** of MEscope on your computer.

Your computer must be connected to the Internet to list and download the **Latest Release Date**.

## Links


This section contains links for accessing online videos and documents.

Your computer must be connected to the Internet to use these links

## Help / License Manager

Opens the MEscope License Manager window, as shown below.

Refer to the 1. Installation & Introduction for details concerning the License Manager.

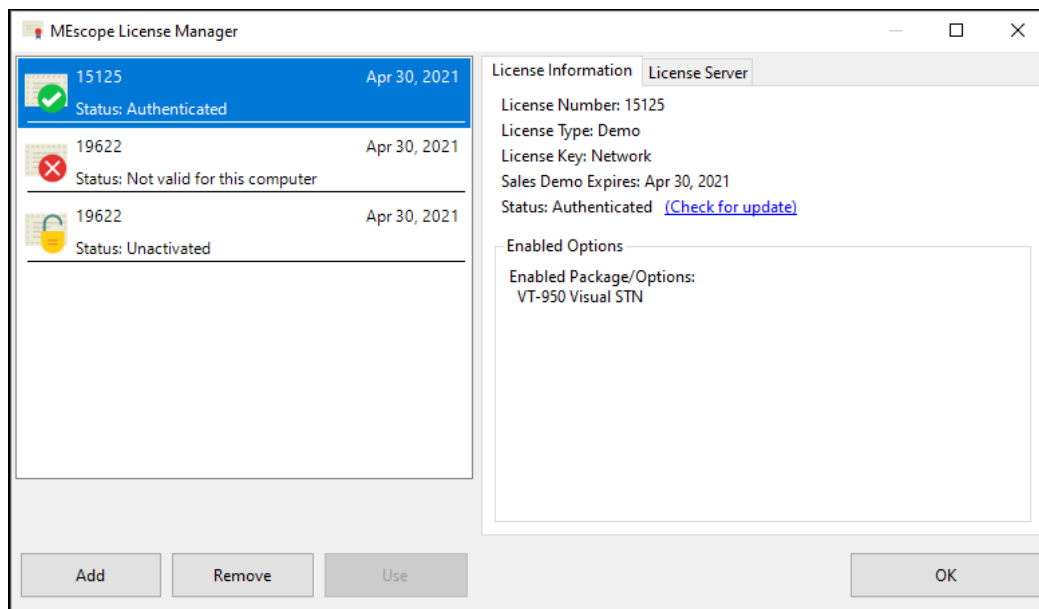

*License Manager.*